




Montageanleitung Mounting Instruction Instructions de montage Istruzioni di montaggio

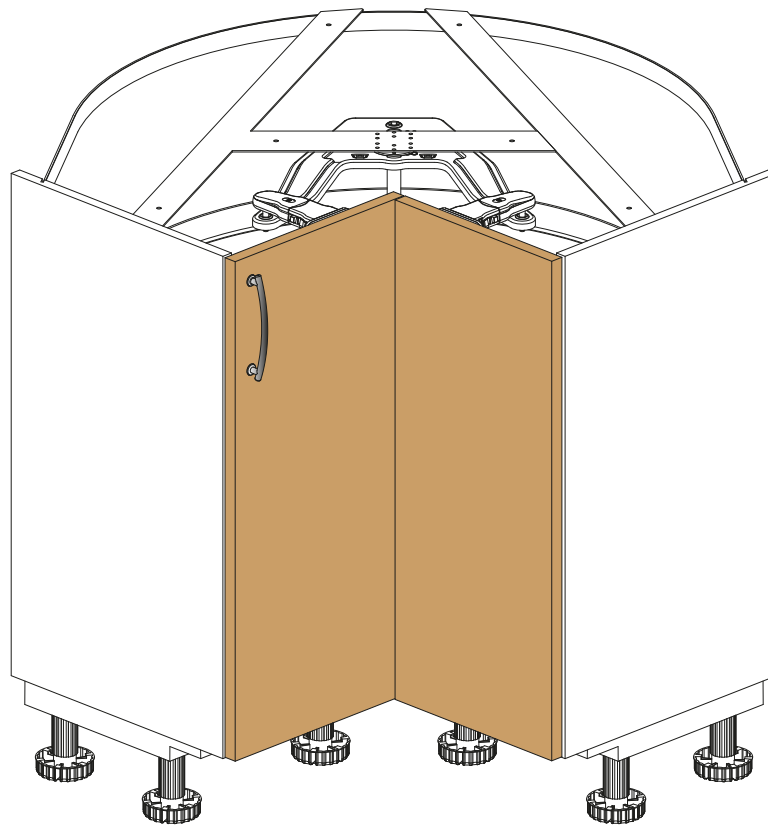


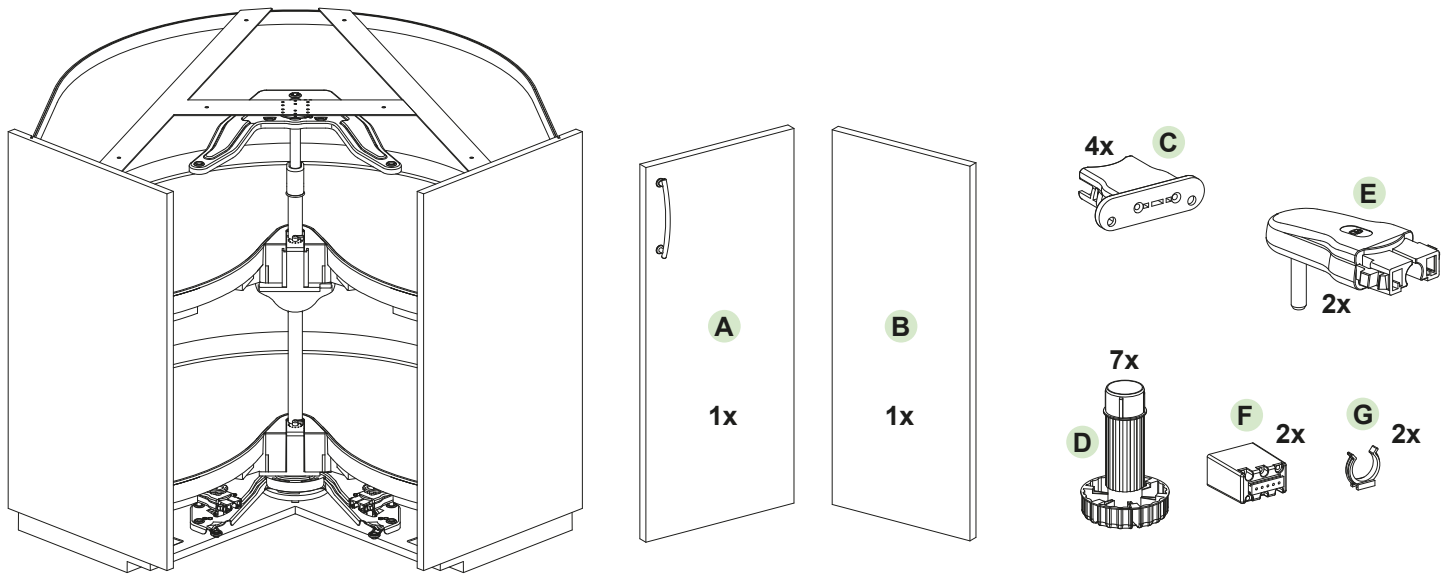



1

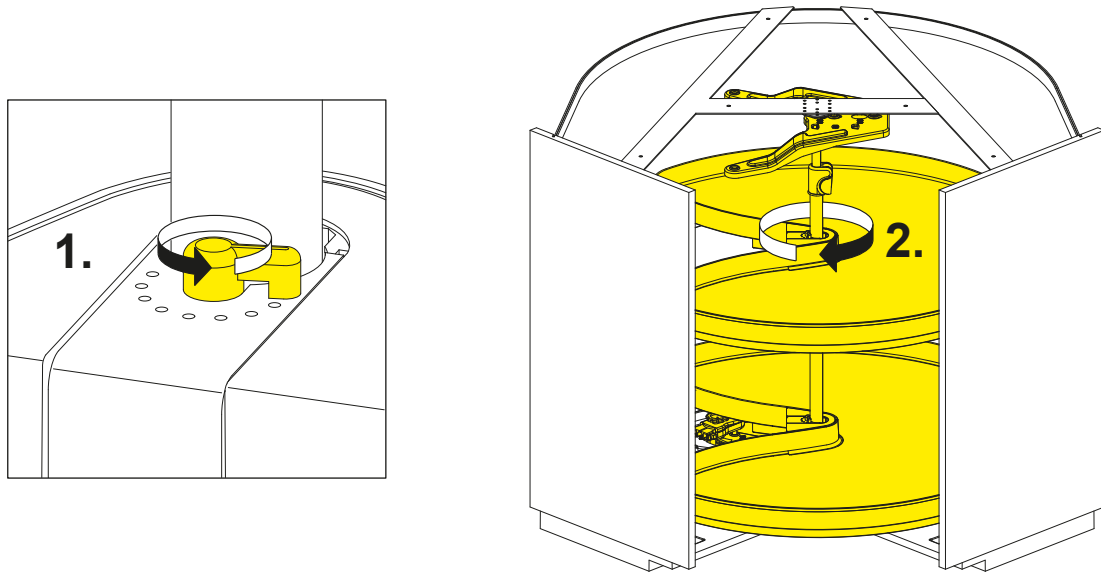



2

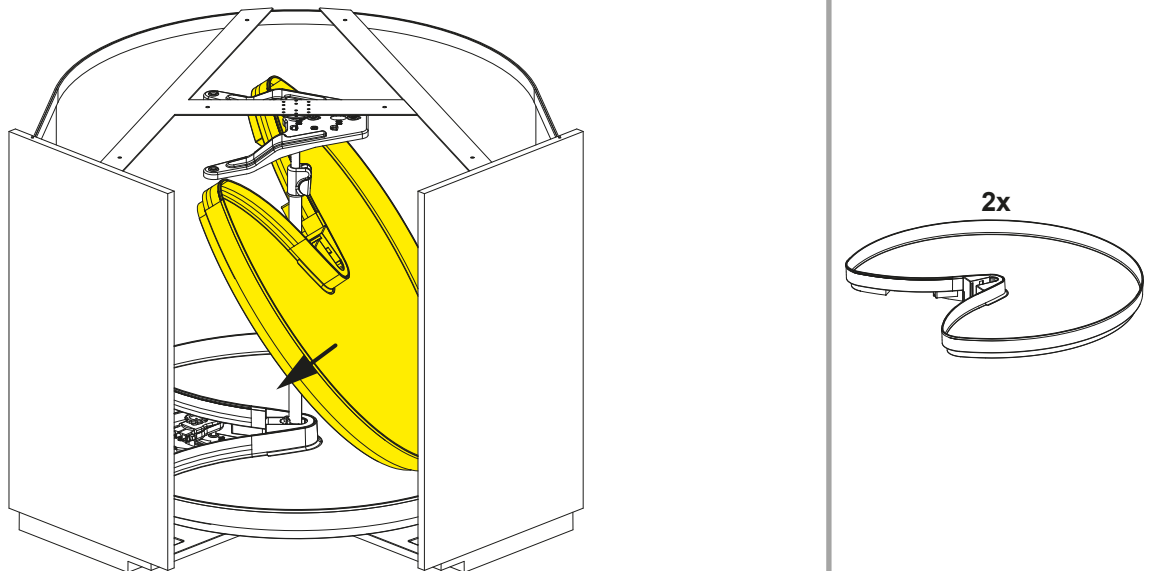





3

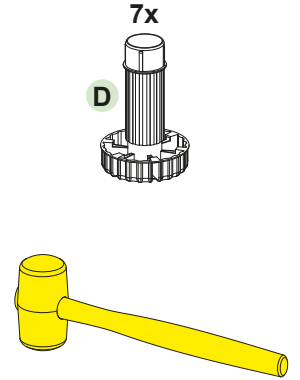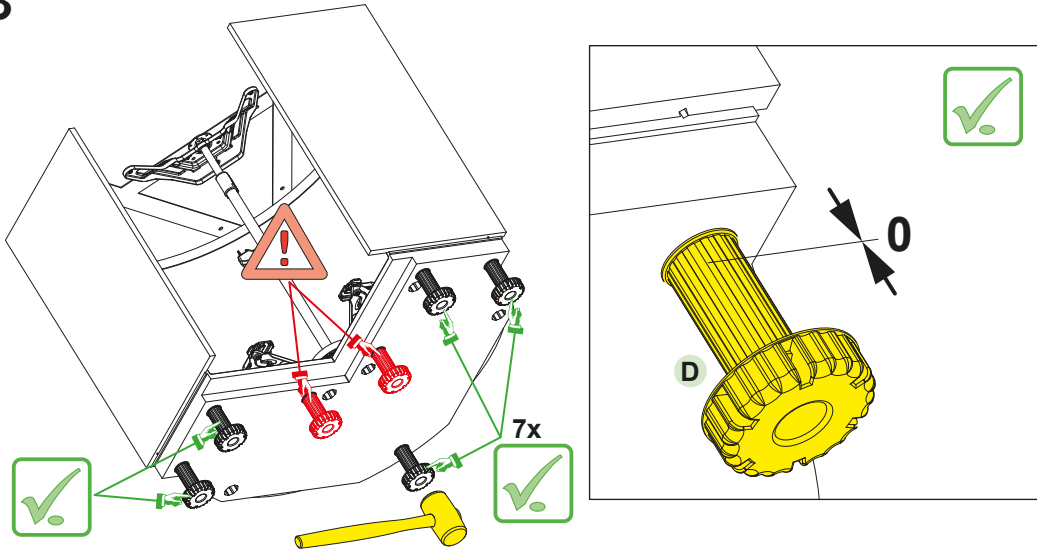




4

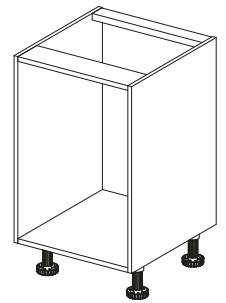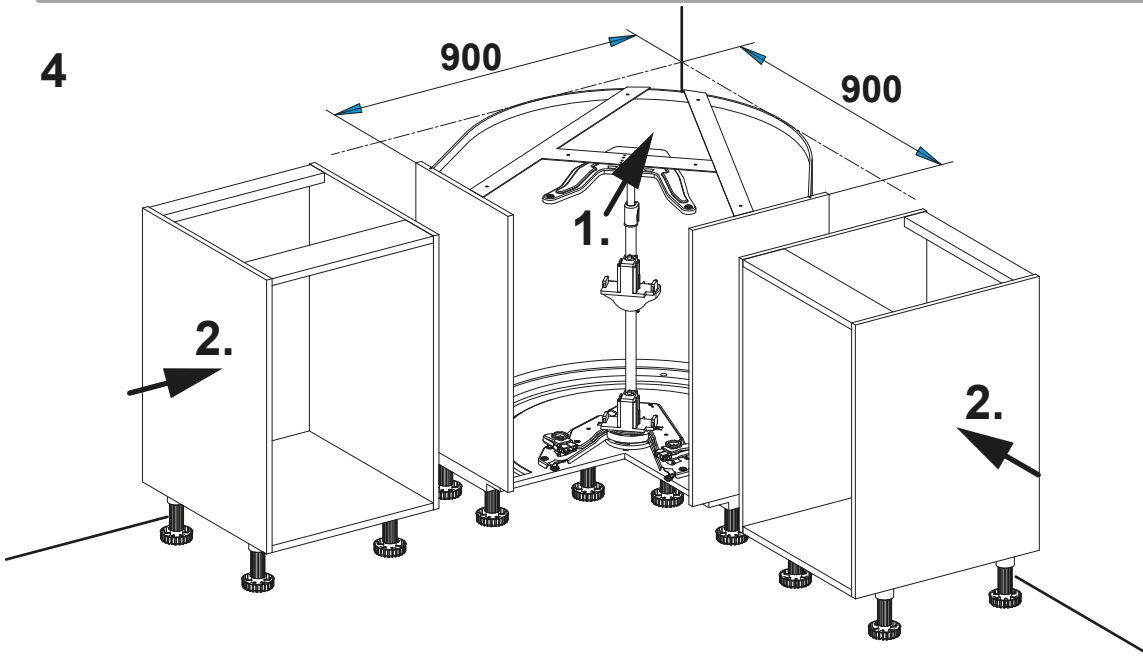




5

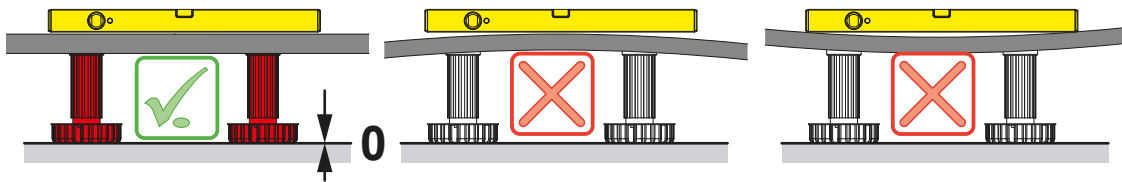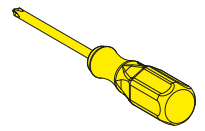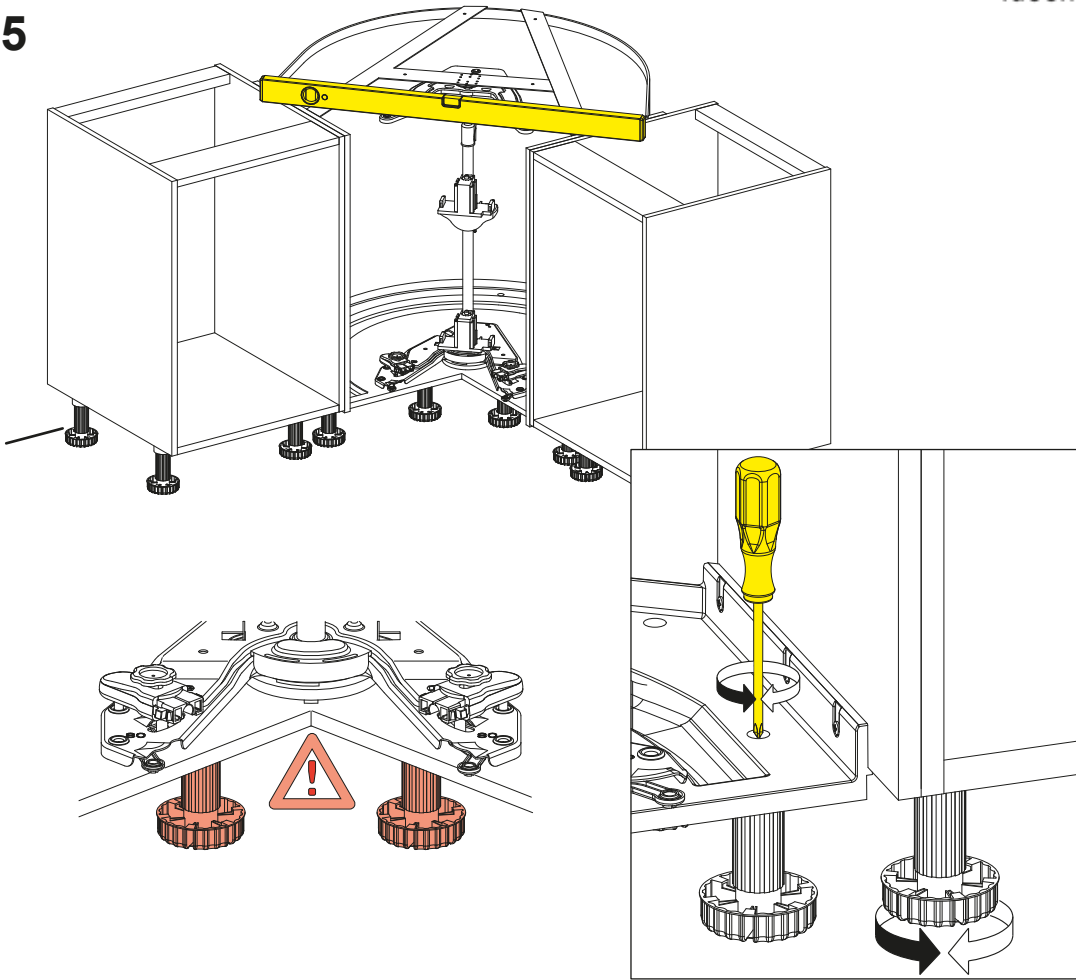





6

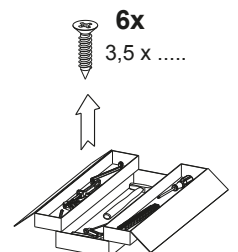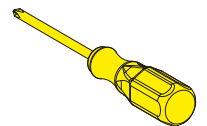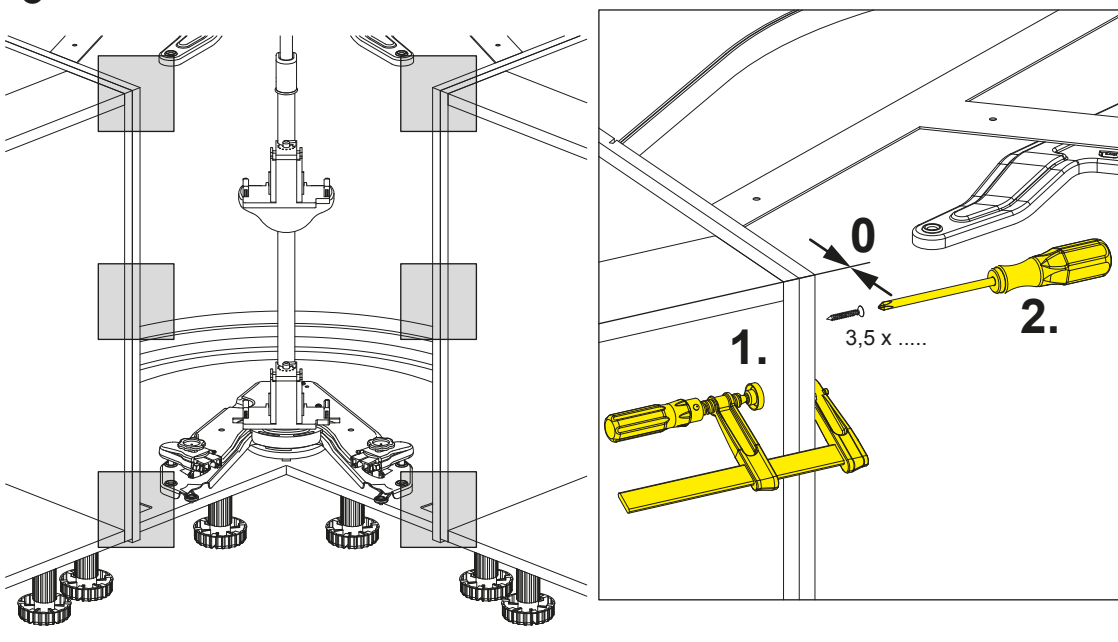



7

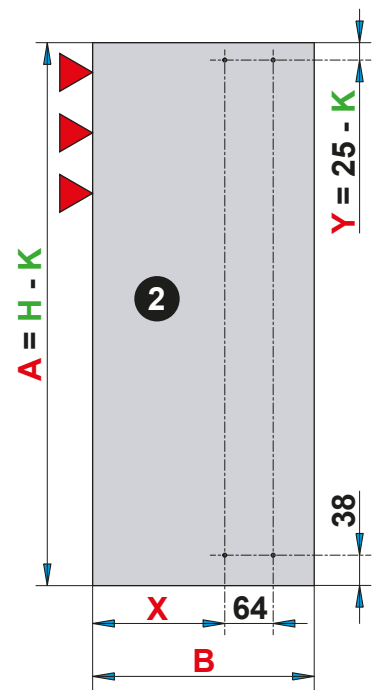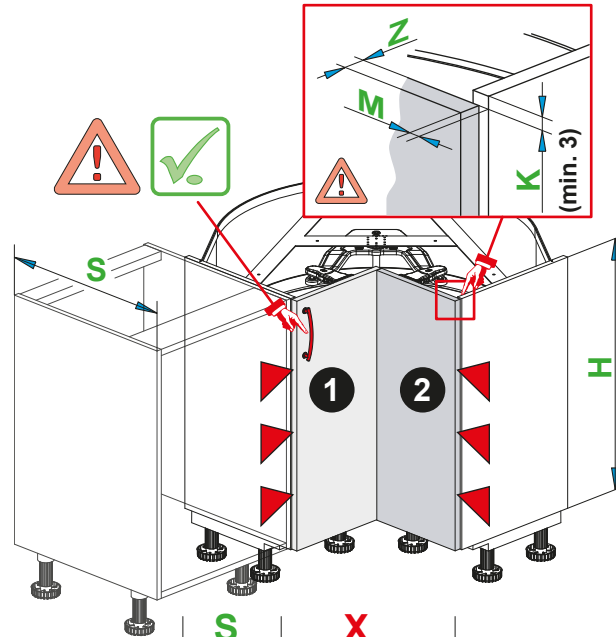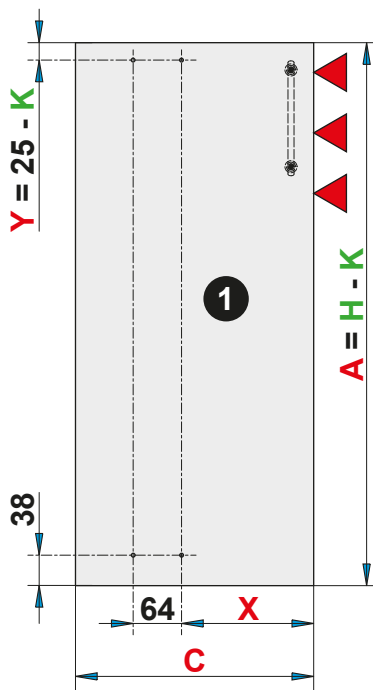




S	X
550	193,5 - M
555	188,5 - M
560	183,5 - M
565	178,5 - M
570	178,5 - M
575	178,5 - M
580	178,5 - M

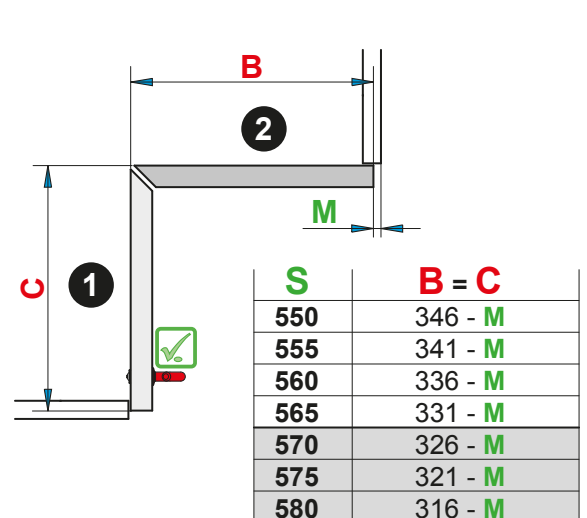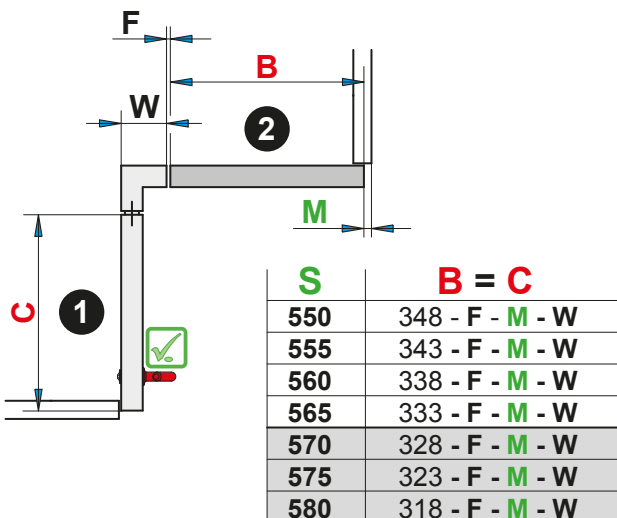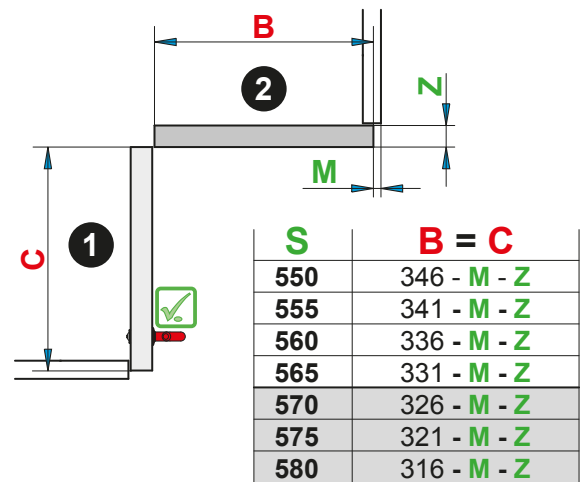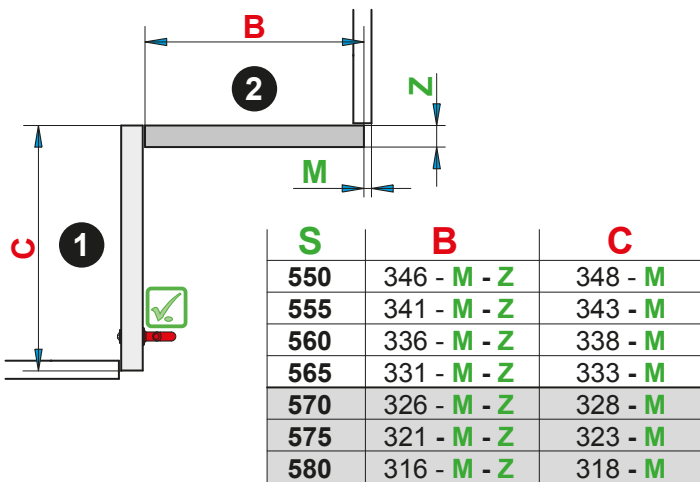






8

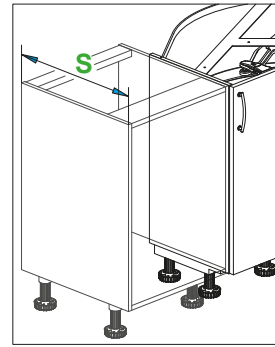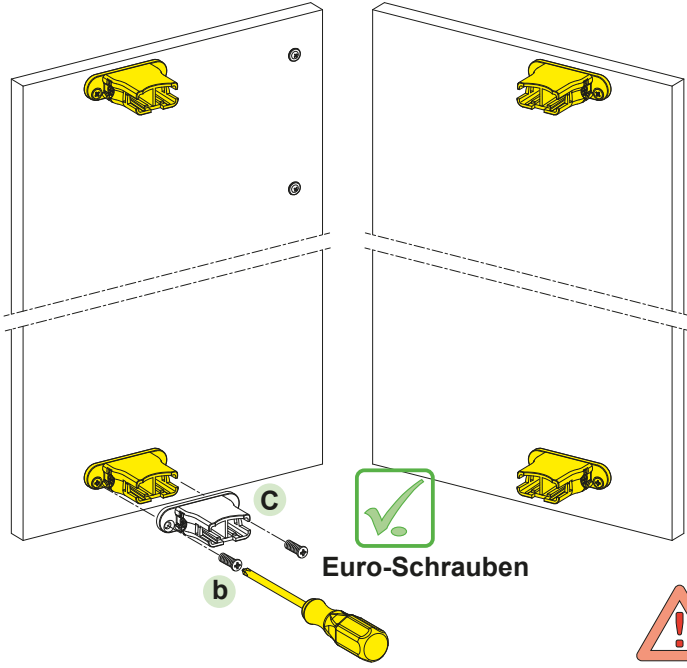











S		
550		✓
555		✓
560		✓
565		✓
570	X = 5	✓
575	X = 10	✓
580	X = 15	✓

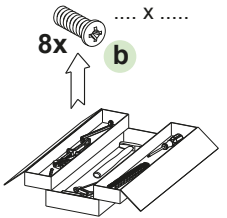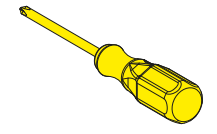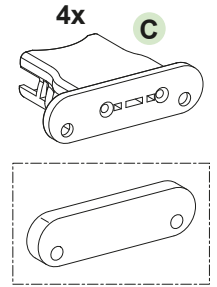


9

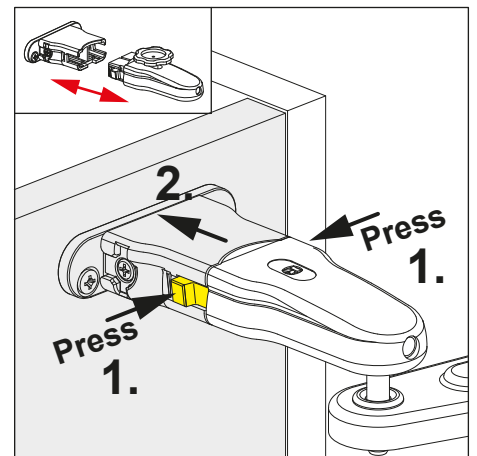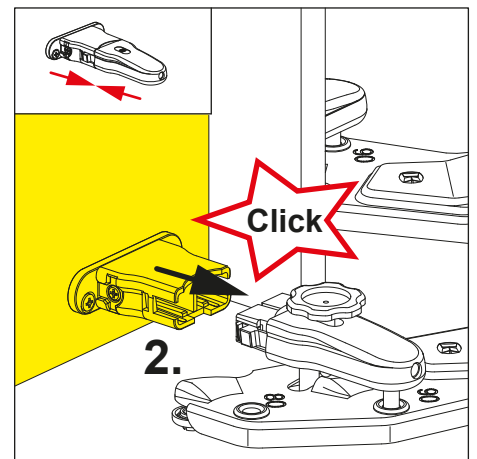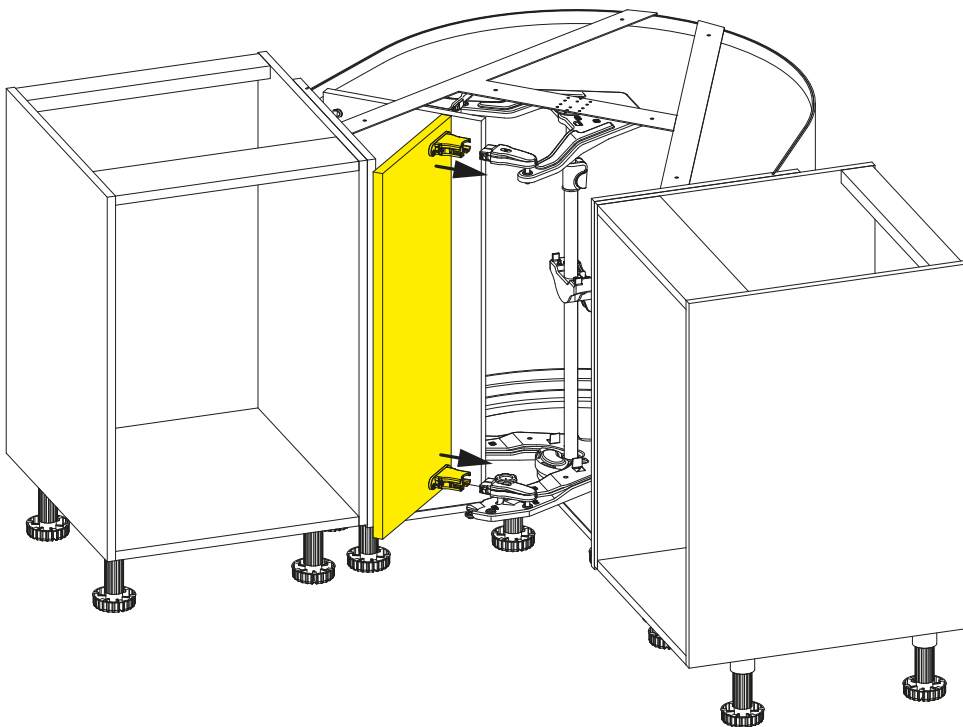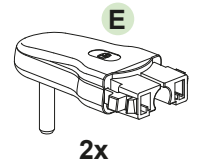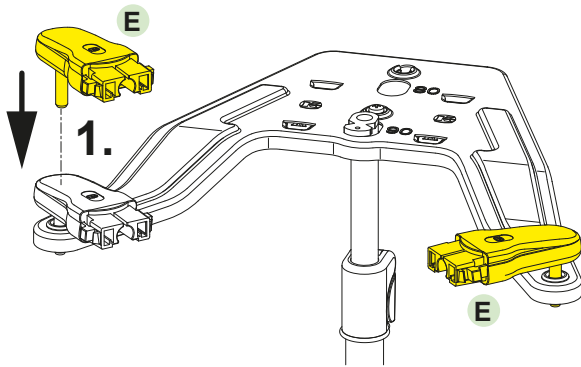



10

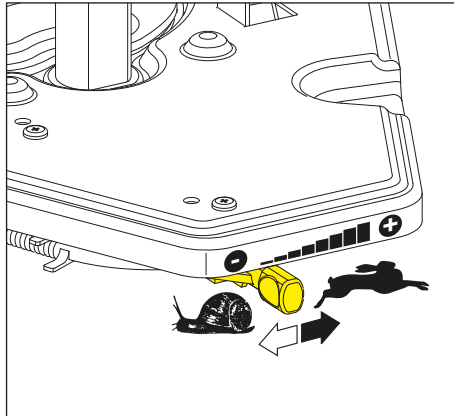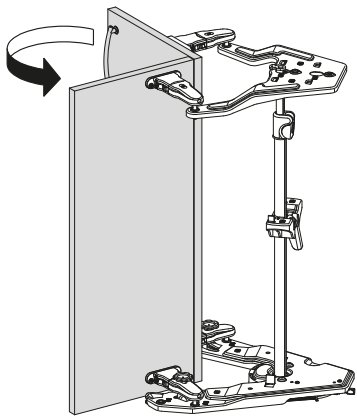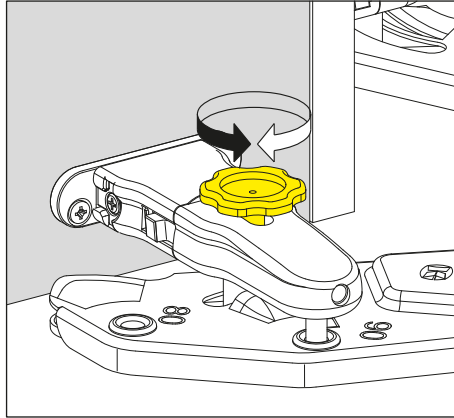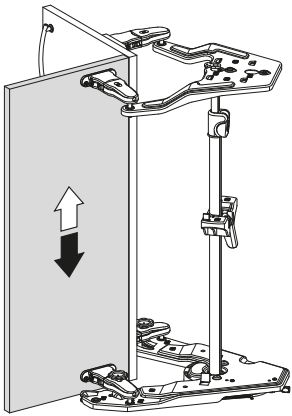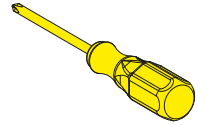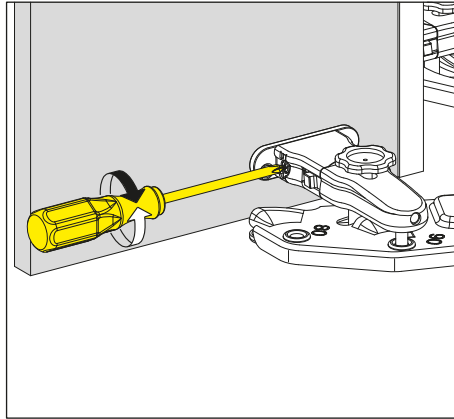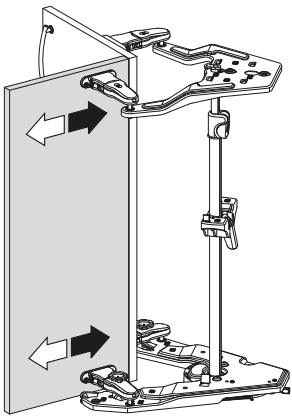
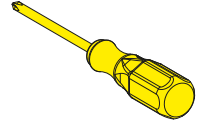
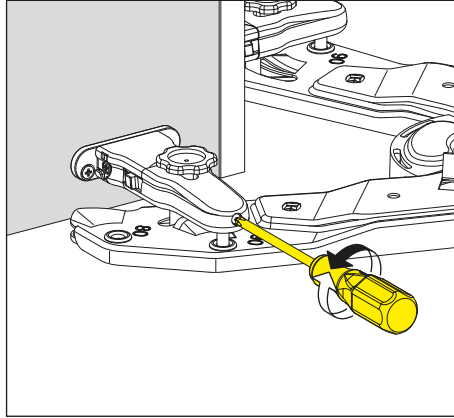
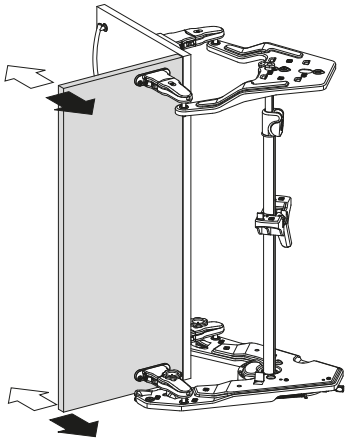


11


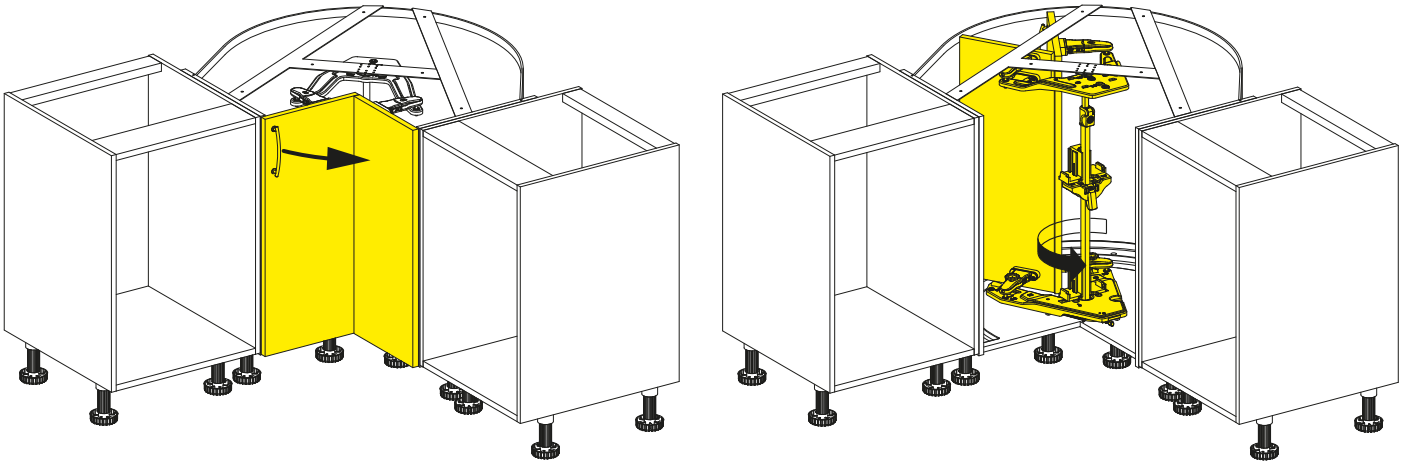


12

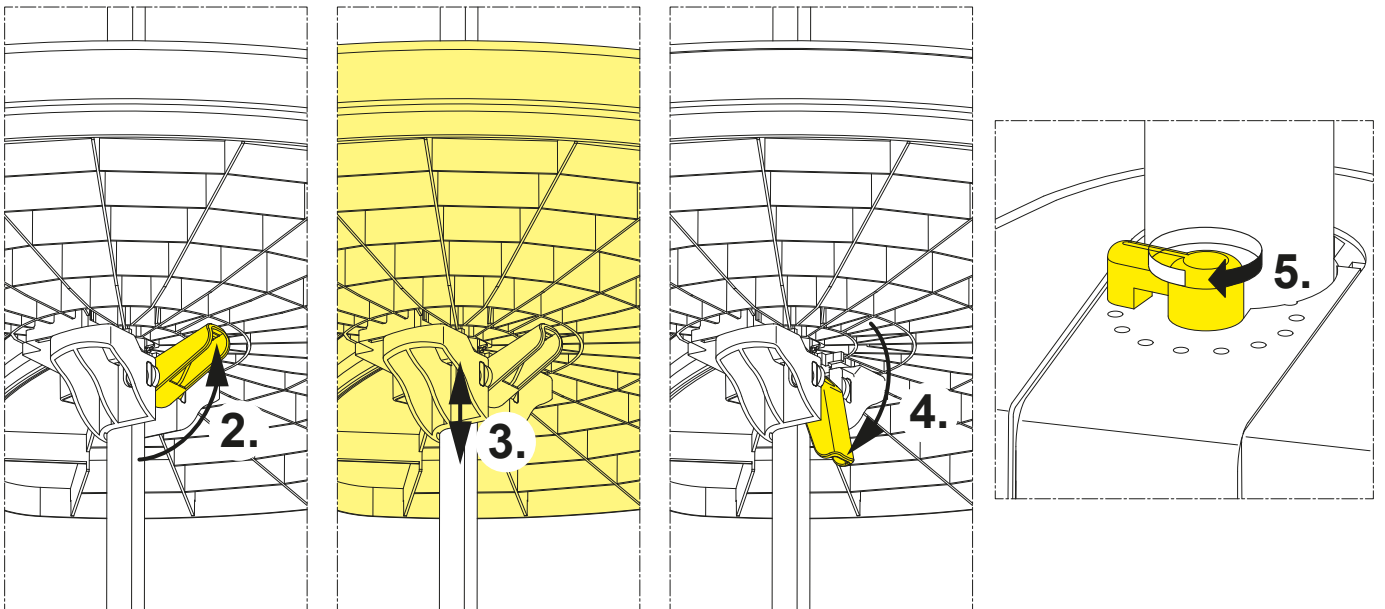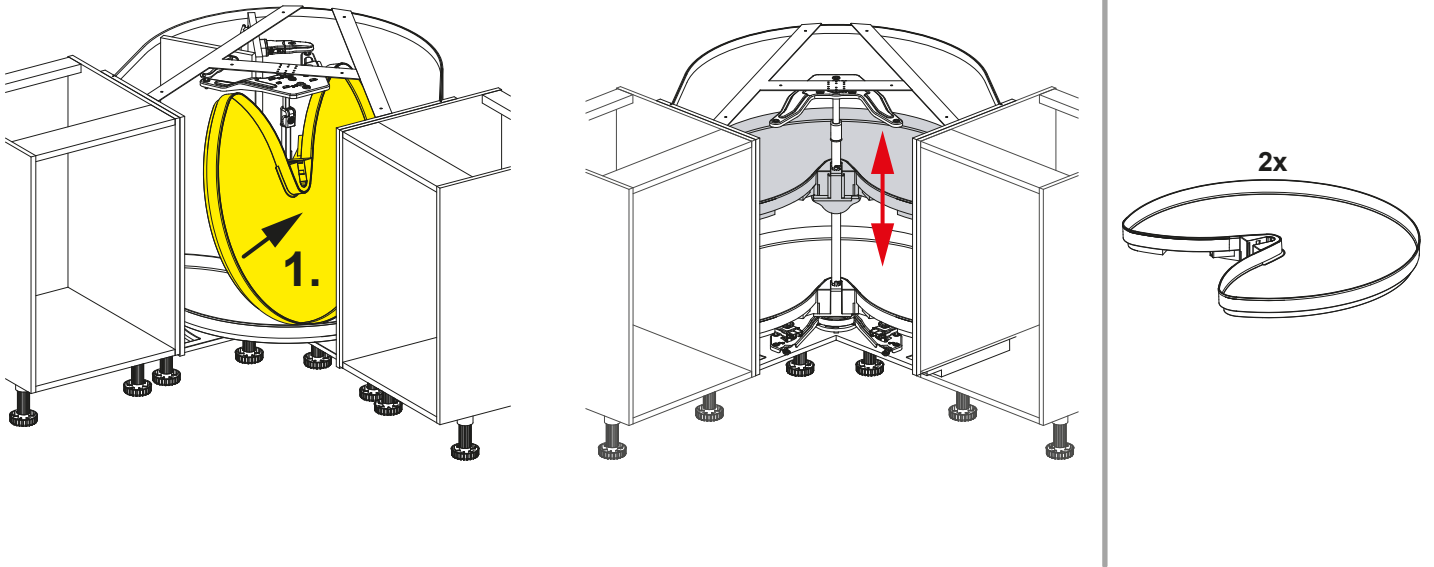

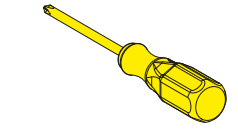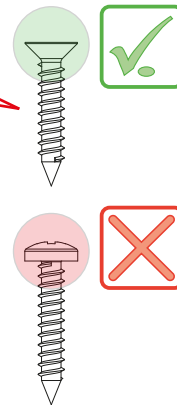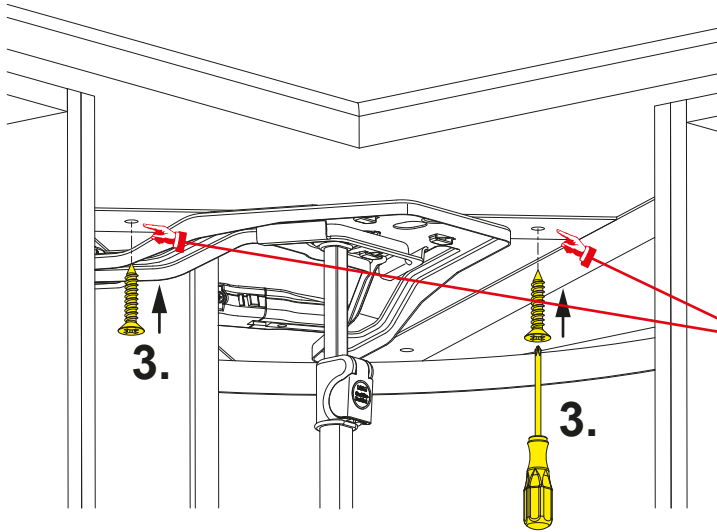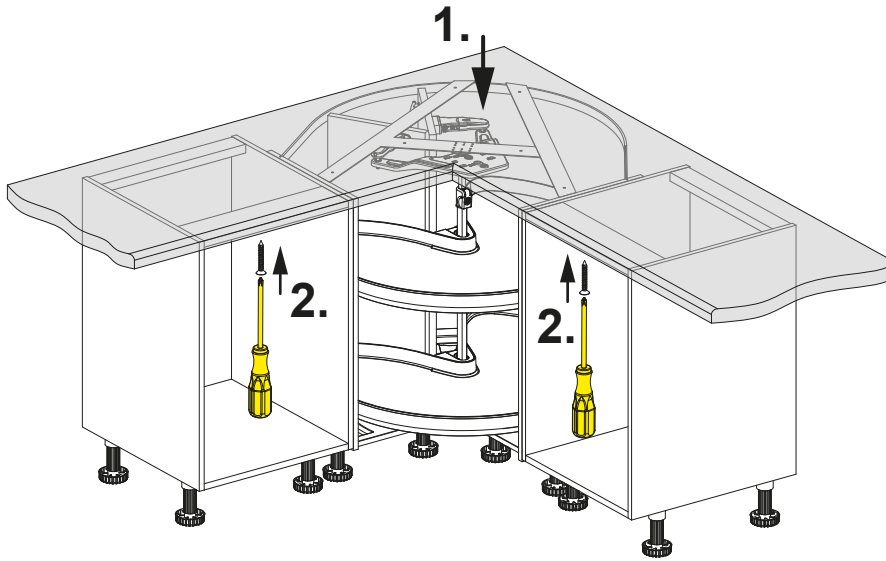

min. 2x
3,5 x

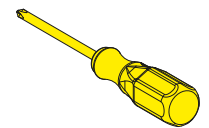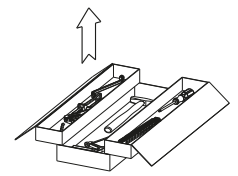

3,5 x

